

Combi Diaper Changing Station


MS: BS-F52WH Installation Manual

In order to safely install the Diaper Changing Station MS BS-F52WH onto a flat surface, please make sure you read this manual and follow the instructions accordingly.

WARNING


- Fix the Diaper Changing Station to both the floor and the wall. The Diaper Changing Station may fall if attached only to a floor.

- Select the anchor bolts that can be firmly secured into concrete, to a depth of at least 40mm. This product may collapse if the anchor bolts are connected to a mortar surface.

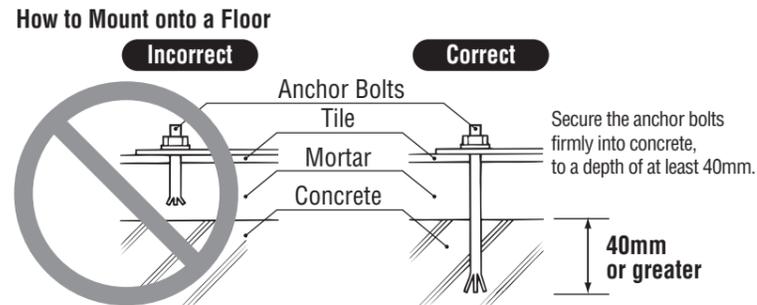


- Apply foundational reinforcement if the wall surface is other than concrete.
*Make sure that each mounting point can withstand a strength of 200N (20kgf or more) [fix four mounting points]. Failure to do so may result in fall.
- When mounting to drywall with self-tapping screws, reinforce the mounting points with light gauge steel (studs or cross-braces), or reinforcement plywood along with the screws. Failure to do so may result in fall.

- When mounting to a partition with self-tapping screws, insert snug-fitting wood reinforcement of at least 30mm at the mounting points. Failure to do so may result in fall.

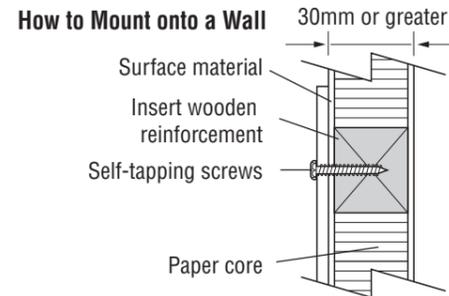

Reference Example of Mounting Location

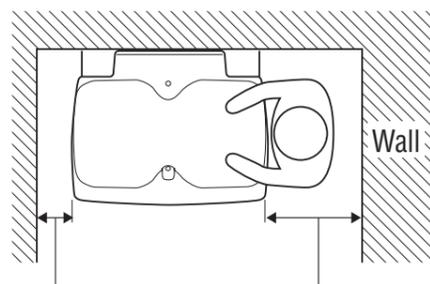

- Install leaving at least 400mm for workspace on either side of the Diaper Changing Station.
- Install leaving a 50mm – 70mm space on the headside between the wall and the Diaper Changing Station.

WARNING

- If installing the product in a private restroom that has toilet and sink, please install in a location where the product can be seen at all times.
- To prevent leaving the child at any time please install a used-diaper receptacle close to the Diaper Changing Station.

CAUTION

The Diaper Changing Station should be installed clearly from door space. otherwise it may cause damage.

Types of Screws used for Wall-mounting

① to ③ indicate the types of wall surface below.

*Only self-tapping screws and washers are supplied with the Diaper Changing Station. Parts other than the supplied hardware will need to be obtained separately.

① Partition/Plasterboard Installation

• Self-tapping screws (6)

φ5x40 self-tapping screws (supplied with Diaper Changing Station)

φ5 washers (supplied with Diaper Changing Station)

Partition Reinforcement

Place a piece of wooden reinforcement at least 30mm in thickness inside the wall
*Note that installing reinforcement wood is extremely important.

Plasterboard Reinforcement

Reinforce plasterboard with a light-weight steel frame, t 12 plywood, or t 2.3 iron plate.



② Concrete/ALC Installation

• M6 screw anchor bolts (6)

• Female bolt type

* Use ALC specific anchors for ALC installation.


• Male bolt type



* Take into account the depth require for safe installation by referring the WARNINGS on the left.

③ Hollow Block Installation

• Toggle Bolts (6)




Floor Surface

Concrete

• M10 screw anchor bolts (3)

• Male bolt type



* Take into account the depth require for safe installation by referring the WARNINGS on the left.

Parts Included

1 Flat Head Screws (M6 L16), 3 	2 Hexagonal Socket Bolts (φ4L16), 8 	3 Washers (M10) ,3 	4 Tapping Screws (φ5L40) Washers (φ5), 6 sets 	5 Tapping Screws (φ4L30), 4
6 L-shape Hexagonal Wrench 2.5, 1 	7 Instruction Panel, 1 	8 Warning Sticker, 1 	9 Users Manual, 3 Installation Manual, 3 	

See back for mounting instructions.


*For information on products, contact the distribution agency.

Manufacturer **Combi Corporation**
2-6-7, Motoasakusa, Taito-ku, Tokyo 111-0041 Japan


Distributor **CombiWith Corporation**
Head Office/2-6-7, Motoasakusa, Taito-ku, Tokyo 111-0041 Japan
TEL : 81-3-5828-7631 FAX : 81-3-5828-7630
www.combiwith.co.jp/

Installation Instructions


1 Remove the hinge covers (right and left) and the top center cover from the unit and connect the unit to the stand.

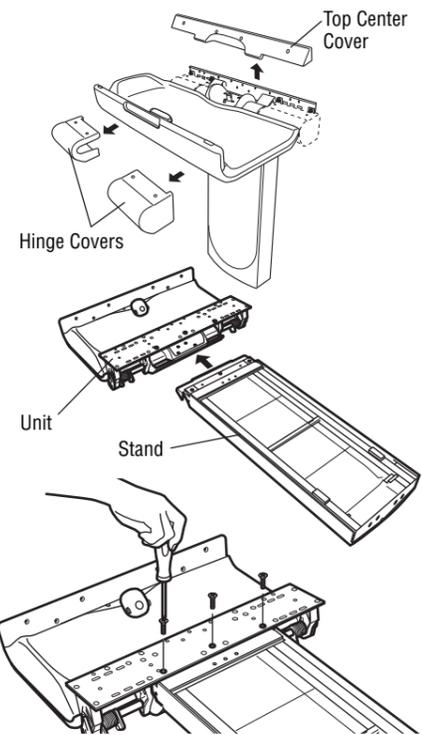


2 Remove the two (2) screws from the stand cover and then remove the stand cover. Confirm where the stand cover attaches and make a mark to indicate this.

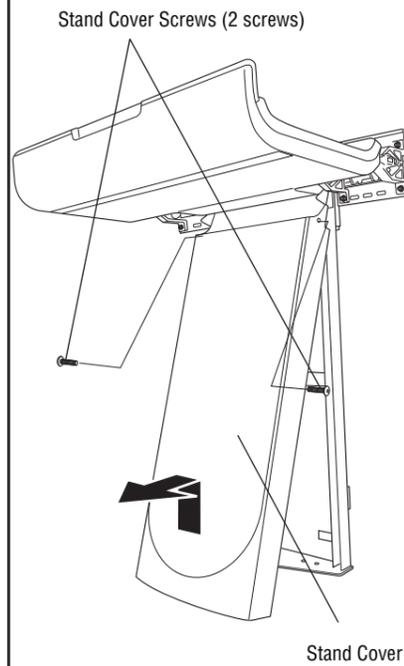

3 Drive M10 anchors into the mounting location.

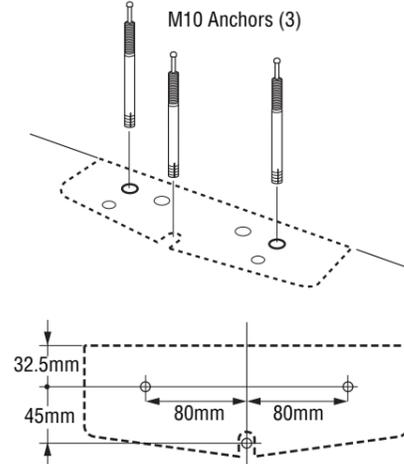


4 Attach the stand frame to the floor.

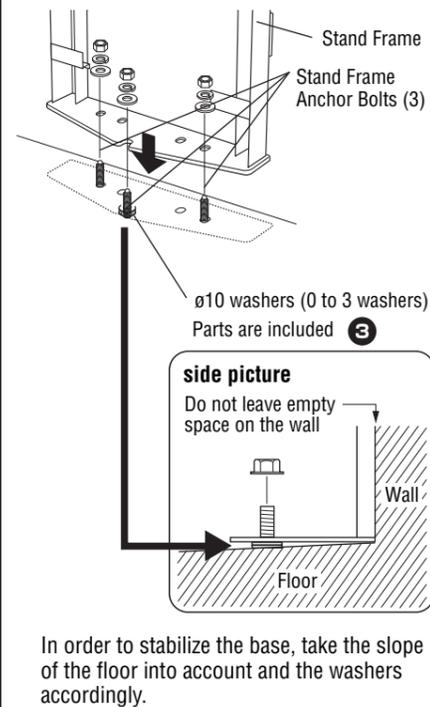


5-1 Installation in Concrete/ALC walls. Drive in M6 anchors and fix the unit in place.


5-2 Installation in partition wall/plasterboard. Fix the unit in place with the included tapping screws.

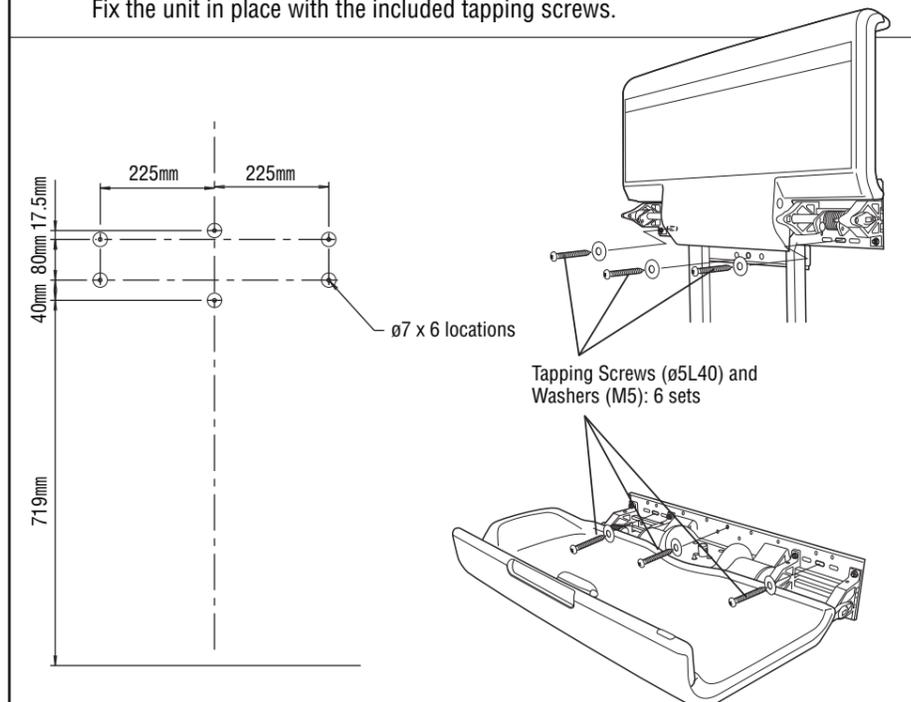


6 Attach the stand cover, attach the hinge covers (right and left), and then attach the top center cover to the unit.

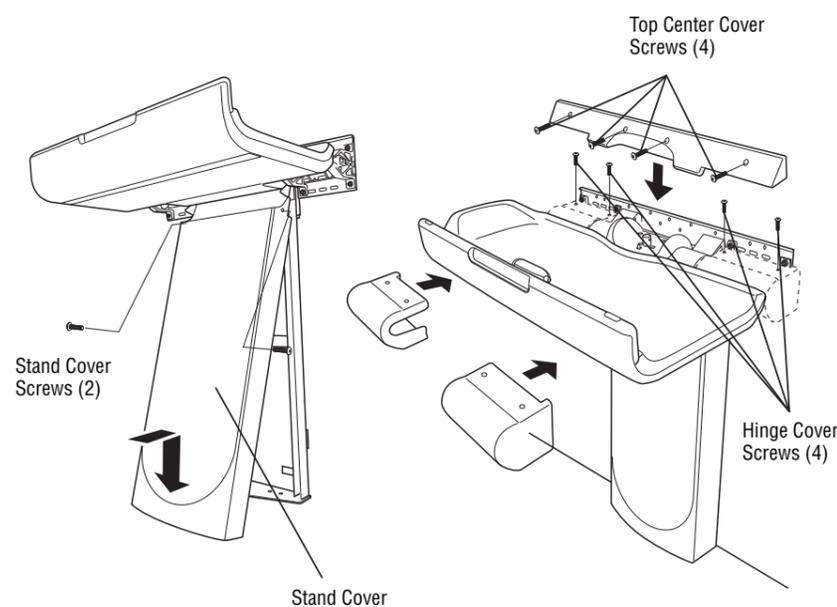


7 When changing the direction of the cushion, please remove the inner cover and then fully remove the cushion before reinstallation.

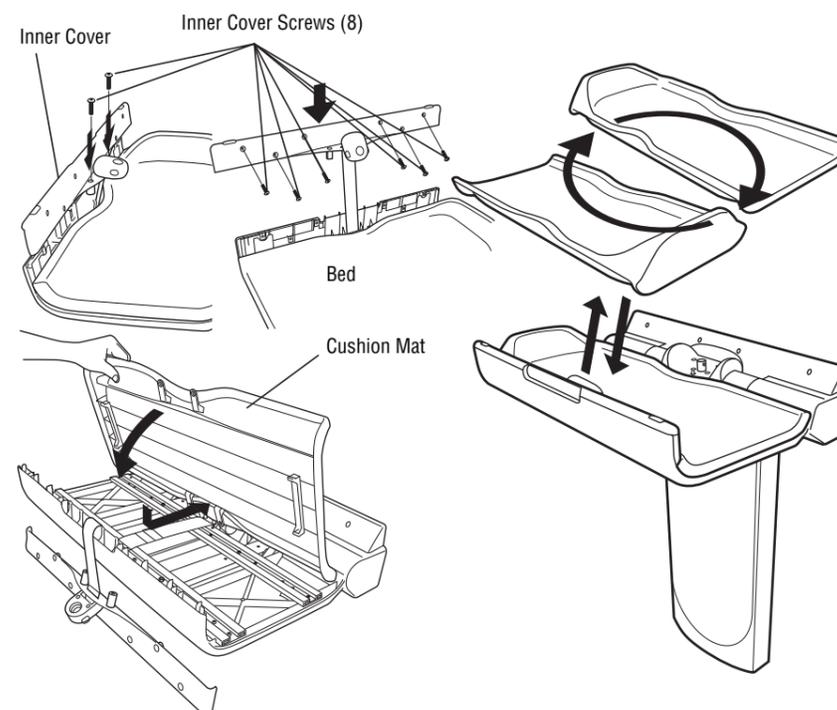

8 Please post the included "Instruction Panel" and "Warning Sticker" near the unit in an easily visible location.

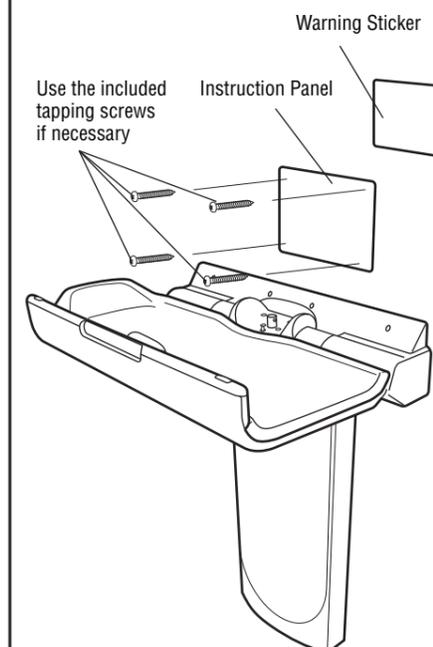

9 Place the guide stickers at the rest room entrance and the stall.

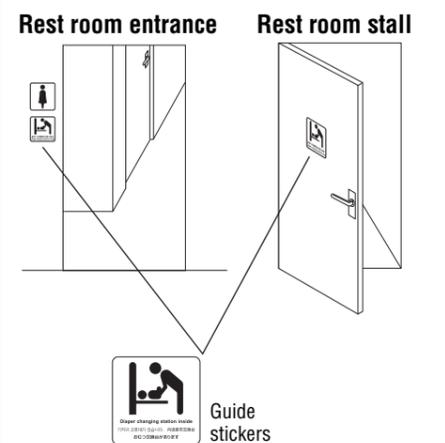

Place the stickers at both the rest room entrance and the stall

WARNING

Thoroughly check the Diaper Changing Station once it has been installed. Refer to the Users Manual "Maintenance Inspection" section. Using the Diaper Changing Station without completely assembling it can lead to injury or serious accidents.