


Combi Booster Seat BU11/BU13 Instruction Manual / Inspection Manual

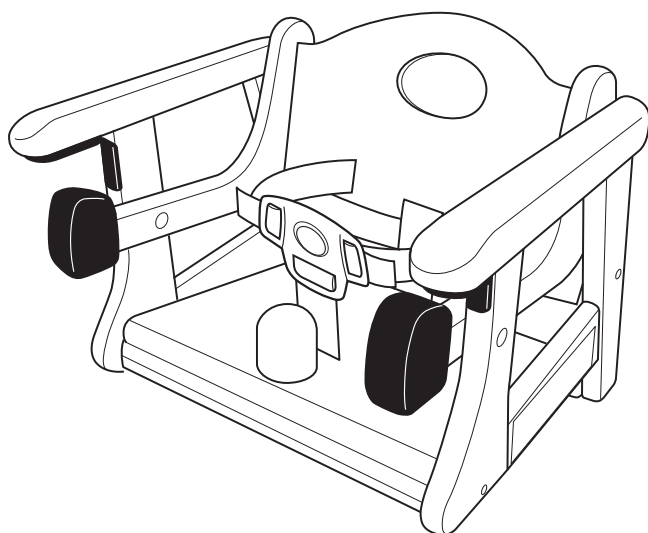

Caution

Storage of Instruction Manual and Inspection Manual

- Improper use of the product may result in injury to children. Before using the product, read this instruction manual and the inspection manual carefully to ensure correct use.
- Keep this manual in a place accessible to read at any time.
- When transferring this product to other branches, hand this manual together.

Combi Booster Seat BU11/BU13



Instruction Manual

1 Usage of the Product

- This product is a child chair designed for indoor use only on bench seats.

2 To Use Safely

- The precautions listed here are categorized as "Warning" or "Caution" depending on the severity and urgency of the harm or damage that may result if the product is handled incorrectly and may cause injury to child or the user, or damage to property. Read carefully and observe the following precautions for safety before use.

 Warning	This indicates that ignoring this warning or mishandling it incorrectly may result in death or serious injury.
 Caution	This indicates that ignoring this caution or handling it incorrectly may result in personal injury or property damage.

3 Request to Personnel at Facilities

Warning

- **Do not modify the product.**
This may lead to unexpected accidents.
- **In order to use the product safely, carry out daily inspection and periodic inspection.**
If inspections are neglected, deterioration or damage to the product may not be discovered, which may result in injury or a serious accident.
- **Do not leave the broken product.**
If it is used or played by children, it may result in injury or a serious accident.
- **Do not use the product for any other purpose.**
- **Check that all parts are not loose.**

For inspection procedures, refer to the "Inspection Manual" on page 4 of this manual.

Caution

- **Do not use the product as a step stool or for any other purpose other than as a chair.**
- **Avoid exposing under direct sunlight or heat.**
- **Do not use the product in humid places.**
- **Use the product horizontally and on a flat surface, free from hazardous objects such as stoves.**
- **Be sure to use and inspect correctly according to the contents of the instruction manual and inspection manual.**


Maintenance

- This product is intended to seat a child. Clean periodically to keep it clean after installation.
- Avoid washing with water. If soiled severely, wipe it off with diluted neutral detergent and then wipe it off with a dry cloth.

Caution


Do not use detergents or chemicals (benzene, thinner, etc.) other than neutral detergent. (Wood may deteriorate, discolor, or crack, resulting in damage.)

4 Installation Conditions

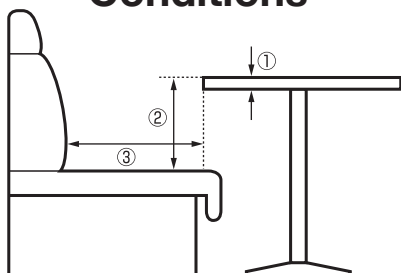

- **For safe use, observe the following installation conditions.**
 - ① Use a BU11 with a square table with a thickness of tabletop 30-45mm.
Use a BU13 with a square table with a thickness of tabletop 45-60mm.
 - ② Space 275 to 300mm from the tabletop to the bench seat is required.
 - ③ If the back side of the tabletop is uneven, the product cannot be installed unless it is in the shape shown on the right.
- It cannot be installed to a round table.
- ③ Installation may not be possible when the edge of the table to the back of the seating surface of the bench seat is below 400mm.

* Please note that if the above installation conditions are not satisfied, installation is not possible. Even if the above conditions are satisfied, it cannot be installed on an unstable table or bench seat due to wobbling.

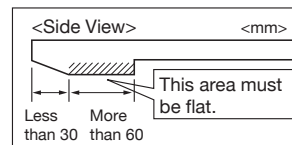

Warning

- This product cannot be used other than fixed tables and bench seats.
- This product is only for bench seats. It cannot be used for a chair that moves easily. When installed on a single-seat chair, this product may fall off if the chair is moved or shaken.
- Be sure to install this product on the tabletop and use it with the rear feet attached to the bench seat. It cannot be used with only a single fixation point.


5 Product Specifications

Product Code	Product Name	Installable Thickness of Tabletop	Overall Dimension (mm)	Weight	Target Age	Weight Limit
BU11	Combi Booster Seat BU11	Tabletop thickness 30~45mm	W403XD370XH360	4.8kg	Sitting unassisted (7 months old) ~ Up to 3 years old (36 months)	15kg
BU13	Combi Booster Seat BU13	Tabletop thickness 45~60mm	W403XD370XH345			

• Material: [Main body] Natural wood, fiberboard (MDF), [Height adjustment rubber] Synthetic rubber

- * This product uses natural wood. Color irregularities may occur. It does not affect its function.
- * Please note that the specifications and prices of the product may be changed without notice.
- * When disposing of this product, please follow the local disposal law.
- * The external dimensions and mass of the product are for reference only.

6 Name of Parts Please select the booster seats BU11 or BU13 according to the thickness of tabletop.

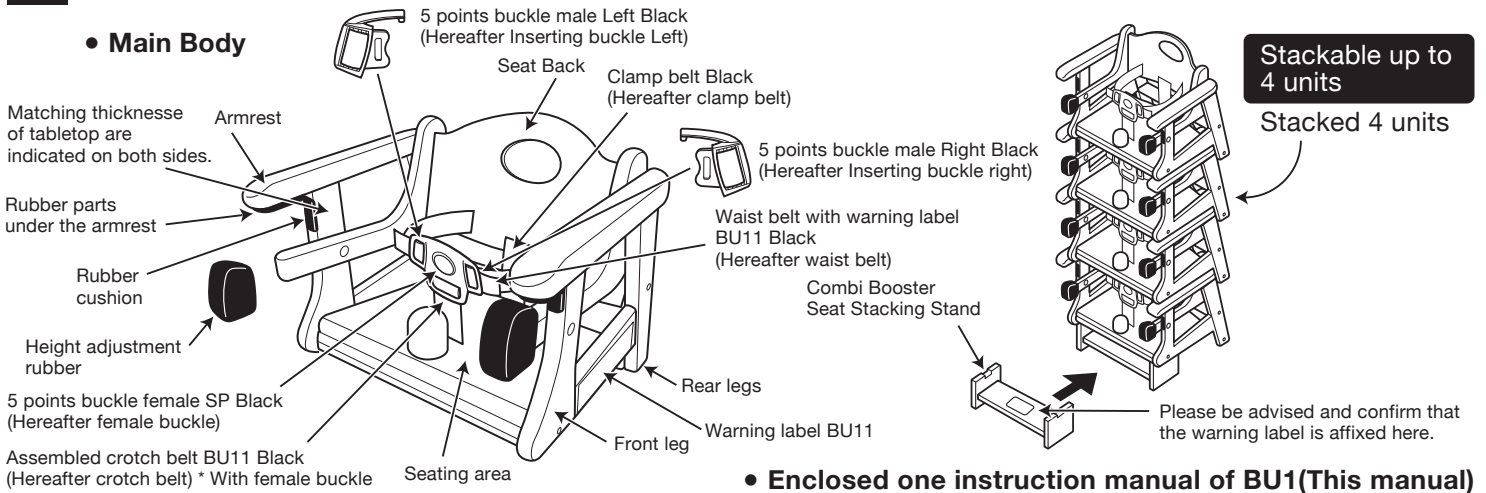

[Important] How to Mount the Height Adjustment Rubber

* Adjust it beforehand according to the thickness of tabletop.

Warning

- Be sure to mount the height adjustment rubber. If not installed, it can not be securely fixed to the tabletop, which may cause the child to fall.
- Mounting differs depending on the product code and thickness of tabletop. Refer to the following to mount correctly.


[Guideline for mounting the height adjustment rubber]

The height adjustment rubber can be pulled out by hand.

Part Code	Thickness of Tabletop (mm)	
BU11	30~37	37~45
BU13	45~52	52~60
How to Mount	Use the height adjustment rubber as it is. Upper side is rounded.	Remove the height adjustment rubber once, then reinsert it upside down before use. Upper side is nearly flat.

How to Mount the Height Adjustment Rubber

Cover about the upper half of the height adjustment rubber, then insert it.

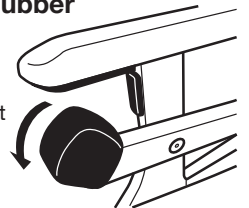

- Be sure to push it in firmly until it reaches the end.

[Confirmation after Installation]

Pull the main unit back and check that the height adjustment rubber does not move.

7 How to Use

Warning

- Target Age : Sitting unassisted (7 months) to 3 years old (36 months)
- Weight limit: Up to 15kg
- This product must be used under the supervision of a caregiver.

* If a caregiver does not accompany, there is a risk of losing balance and fall when getting on and off.



Always use seat belts
Adjust the length and tighten securely without any slack.



Never leave your child



Do not allow standing or leaning out.




Do not pull from outside or climb.




Do not mount to a free-standing chair or table.

- An adult must install this product.

1 Fix the armrest to the tabletop securely.

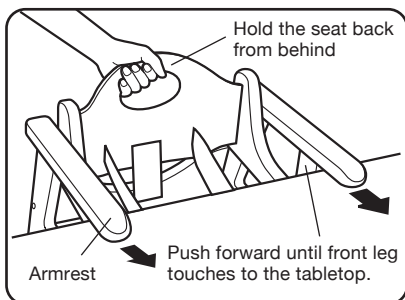


2 Seat child and wear the seat belt.

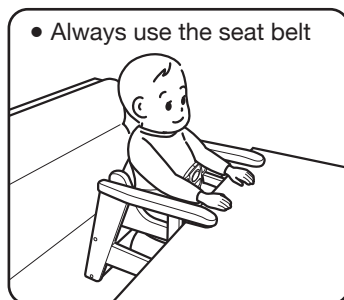

Warning

- Be sure to mount to the tabletop securely, and the rear legs must be placed on the bench seat.
- * It cannot be installed with only one fixation point.

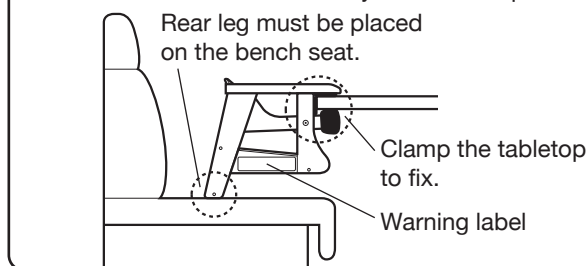

- For customers do not understand how to install the product, the clerk must install the chair or explain how to install it. In addition, read the warning label affixed to the main unit carefully and remind users to avoid misuse.

How to Use the Seat Belt

* Here, the waist belt, crotch belt, and buckle (female buckle, right/left insertion buckle) are collectively referred to as the seat belt.


Warning

- After seating the child, tighten the seat belt by adjusting the length of the belt, ensuring it is firmly secured without any slack. If the seat belt is not fastened, there is a risk of the child falling.
- Attach the buckle to the waist belt with a slack of at least 3cm from the end as shown in the illustration. If there is insufficient slack, the waist belt may come out of the buckle during use, and the child may fall.
- After installation, pull the waist belt firmly and confirm that the waist belt does not come out of the buckle before use.

Caution

- Do not allow children to operate the seat belt. Improperly tightening the belt may lead to unexpected accidents, such as the child falling.

1. How to Use the Buckle

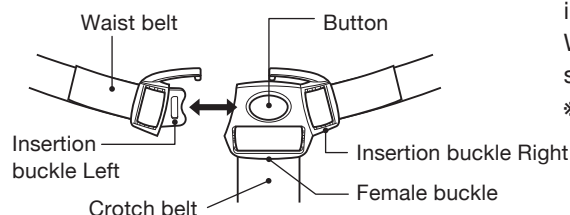


Pressing the button at ○ area in the left diagram releases the right and left insertion buckles.

When tightening the seat belt, insert the left and right insertion buckles securely into the female buckle of the crotch belt.


* The female buckle cannot be removed from the crotch belt.

2. Adjusting the Length of the Waist Belt


Belt thread of Insertion buckle (A)(B)(C)

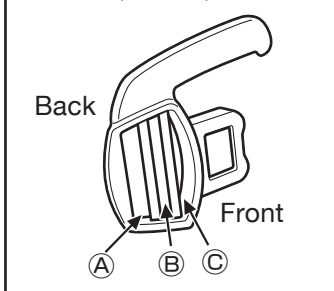


1. Remove the waist belt on the back of the buckle from the belt thread (A).

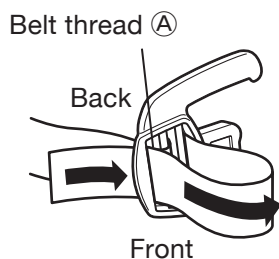

2. Pull the waist belt right and left to adjust the belt length.

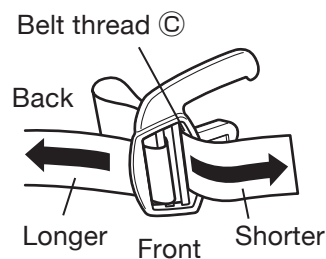

3. Pass the waist belt on the front side of the buckle from the belt thread A to the back side.

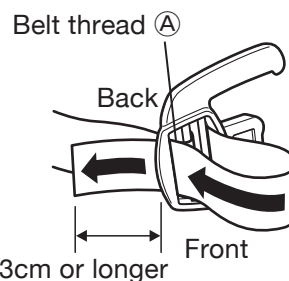

What to do in this situation?

I can not determine right tightness.

→The second joint of the adult's finger should be inserted between the child and the belt.

Adjust the length of the waist belt so that the end of the belt remains at least 3cm.

Combi Booster Seat BU11/BU13

Inspection Manual

This manual describes the "Daily Inspection" required to use Combi Booster Seat BU11/BU13 comfortably and safely.

In accordance with the contents of this manual, perform daily or weekly inspections correctly.

Warning

- Do not use the product if screws are loose or if the wooden parts are damaged. Otherwise, the product may become unstable, resulting in injury or serious accident.
- Carry out daily inspections to ensure safe use of the product. Neglecting inspection can lead to undetected wear and tear or damage to the product, which may result in injuries or serious accidents.
- Do not use any parts other than those installed in the factory or parts and tools specified by CombiWith Corp. Otherwise, this may lead to damage, failure, or unexpected accident.

Daily Inspection

Daily inspection is carried out by visual inspection and tactile feel.

If any abnormality is found in the inspection, use the tool for inspection depending on the item.

* The storage period of replacement parts is 5 years after production ends.

Caution

When tightening, do not use power tools. Always tighten by hand and avoid over-tightening. Excessive tightening can deform the screw head, which may result in sharp edges.

- Use the "Daily Inspection Check Sheet" for inspection.
- If any abnormality is found during inspection, immediately stop using the product and take appropriate measures according to the treatment of defects is a replacement or repair, contact the sales agent to request a repair.



Required tools: Hex. key wrench
(nominal 4mm)



Phillips screwdriver
(No.2)



Inspection Items	Inspection Method	Judgment Criteria	Treatment of Defects
① Overall	Visual / Feel	No rattling	Replace
② Seat back	Visual / Feel	No cracks or rattling	Replace
③ Seating area	Visual / Feel	No cracks or rattling	Replace
④ Armrest	Visual / Feel	No cracks or rattling	Replace
⑤ Front leg / Rear Leg	Visual / Feel	No cracks or rattling	Replace
⑥ Height adjustment rubber	Visual / Feel	No looseness, detachment, tearing, cracks, or damage	Replace
⑦ Rubber under armrest	Visual / Feel	No looseness, detachment, tearing, cracks, or damage	Replace
⑧ Cushion rubber	Visual / Feel	No looseness, detachment, tearing, cracks, or damage	Replace
⑨ Buckle	Operation / Visual / Feel	Can be fixed without dropping or breaking	Replace
⑩ Waist belt / Crotch belt	Visual / Feel	No fray or scratches	Replace
⑪ Clamp belt	Visual / Feel	No fray or scratches	Replace
⑫ 9 screws (cross type)	Operation / Visual / Feel (Phillips screwdriver No 2)	No detachment or looseness	Retightening
⑬ 8 screws (hexagon type)	Operation / Visual / Feel (Nominal hexagon bar wrench 4mm)	No detachment or looseness	Retightening
⑭ Two stickers	Visual	No frays or tears and that everything is properly printed. Contents are legible.	Replace

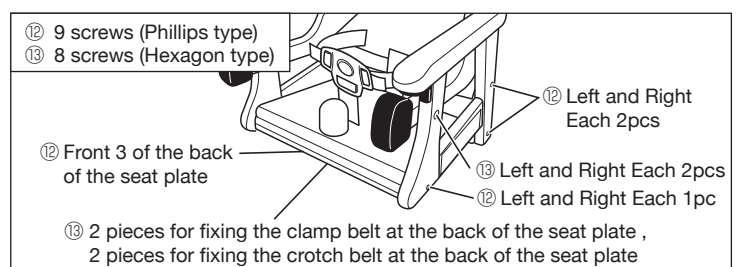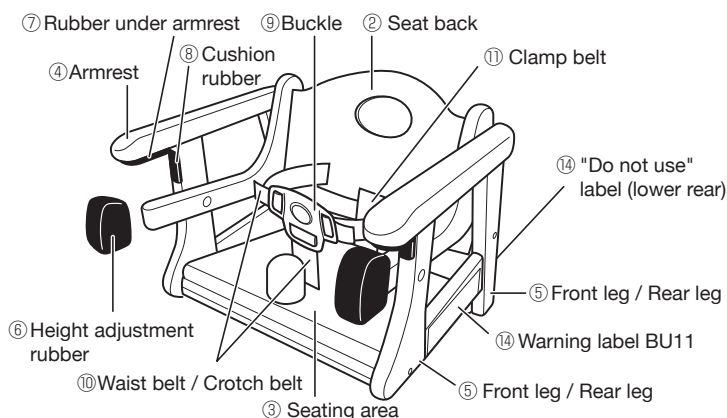

Inspection Items	Inspection Method	Month and Date	Month and Date	Month and Date	Month and Date	Month and Date	Month and Date	Month and Date
		/	/	/	/	/	/	/
		Unit	Unit	Unit	Unit	Unit	Unit	Unit
① Overall	Visual / Feel							
② Seat back	Visual / Feel							
③ Seating area	Visual / Feel							
④ Armrest	Visual / Feel							
⑤ Front leg Rear leg	Visual / Feel							
⑥ Height adjustment rubber	Visual / Feel							
⑦ Armrest rubber	Visual / Feel							
⑧ Cushion rubber	Visual / Feel							
⑨ Buckle	Operation / Visual / Feel							
⑩ Waist belt / Crotch belt	Visual / Feel							
⑪ Clamp belt	Visual / Feel							
⑫ 9 screws	Operation / Visual / Feel (Phillips screwdriver No 2)							
⑬ 8 screws	Operation / Visual / Feel (Nominal hexagon bar wrench 4mm)							
⑭ Two stickers	Visual							
Inspector								
Approved by								


Combi Booster Seat BU11/BU13 Parts Replacement Procedure Manual

If any abnormality is found during the inspection or when replacing with a new part, please read this replacement procedure carefully and replace it correctly. For details, contact the sales agent.

Procedure for replacing crotch belt and clamp belt

Required tool: Hex. bar wrench (nominal 4mm)

<Back side of seat plate>

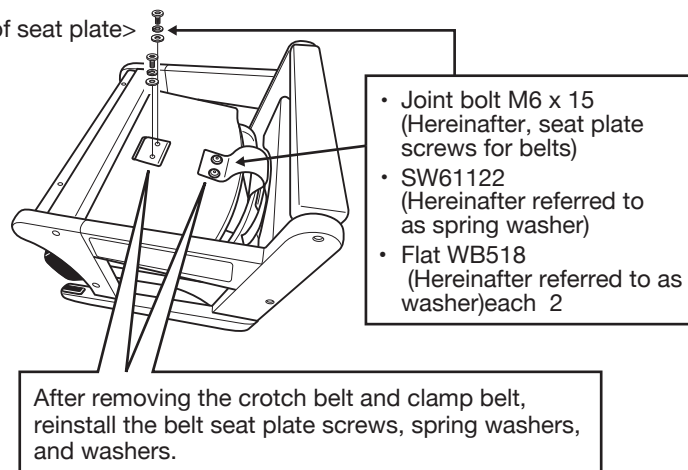

Warning

After replacing parts, be sure to perform the “daily inspection” according to the specified guidelines.

Caution

- When retightening, do not use power tools. Always tighten by hand and avoid overtightening. Excessive tightening may deform the screw head, which may result in a sharp edge.

• Inquiries about products

CombiWith Corporation

Head Office/2-6-7 Moto Asakusa, Taito-ku, Tokyo 111-0041
URL/www.combiwith.co.jp/english/

This manual is available on the CombiWith website.
It can also be downloaded (PDF) from
(www.combiwith.co.jp/english/).